
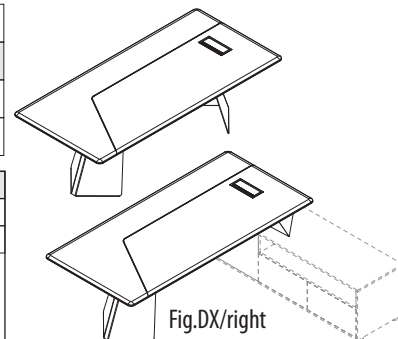






CODE	Ø x L	COLOUR
506223907	8MA x 20	BRUNITA burnished
 A x 12		
TB/E		

CODE	COLOUR
505180222	FERRO iron
 B x 1	

CODE	Ø x L	COLOUR
506223307	6MA x 15	BRUNITA burnished
 C x 6		
TB/E		




CODE	Ø x L	COLOUR
506223407	6MA x 65	BRUNITA burnished
 D x 6		
TB/E		


CODE	COLOUR
505182201	FERRO iron
 E x 1	


FASI / phase 1-2-3-4-5

- 1** FISSARE LE GAMBE SUI TRAVERSI DEL TELAIO
fix the legs to the frame crossbars
- 2** FISSARE LA GAMBA CORTA SUL MOBILE DI SERVIZIO
fix the short leg on the service unit
- 3** INSERIRE L'EVENTUALE TOP-ACCESS
insert any top-access
- 4** FISSARE IL TOP-ACCESS INTERNAMENTE SUI LATI CON LE DUE VITI
fix the top-access internally on the sides with the two screws
- 5** POSIZIONARE IL PIANO SOPRA LA STRUTTURA METALLICA E FISSARE DA SOTTO
place the top on the metal structure and fix from below

N.B. PER IL MONTAGGIO
SEGUIRE LE FASI NUMERATE
assemble following
the numbered phases

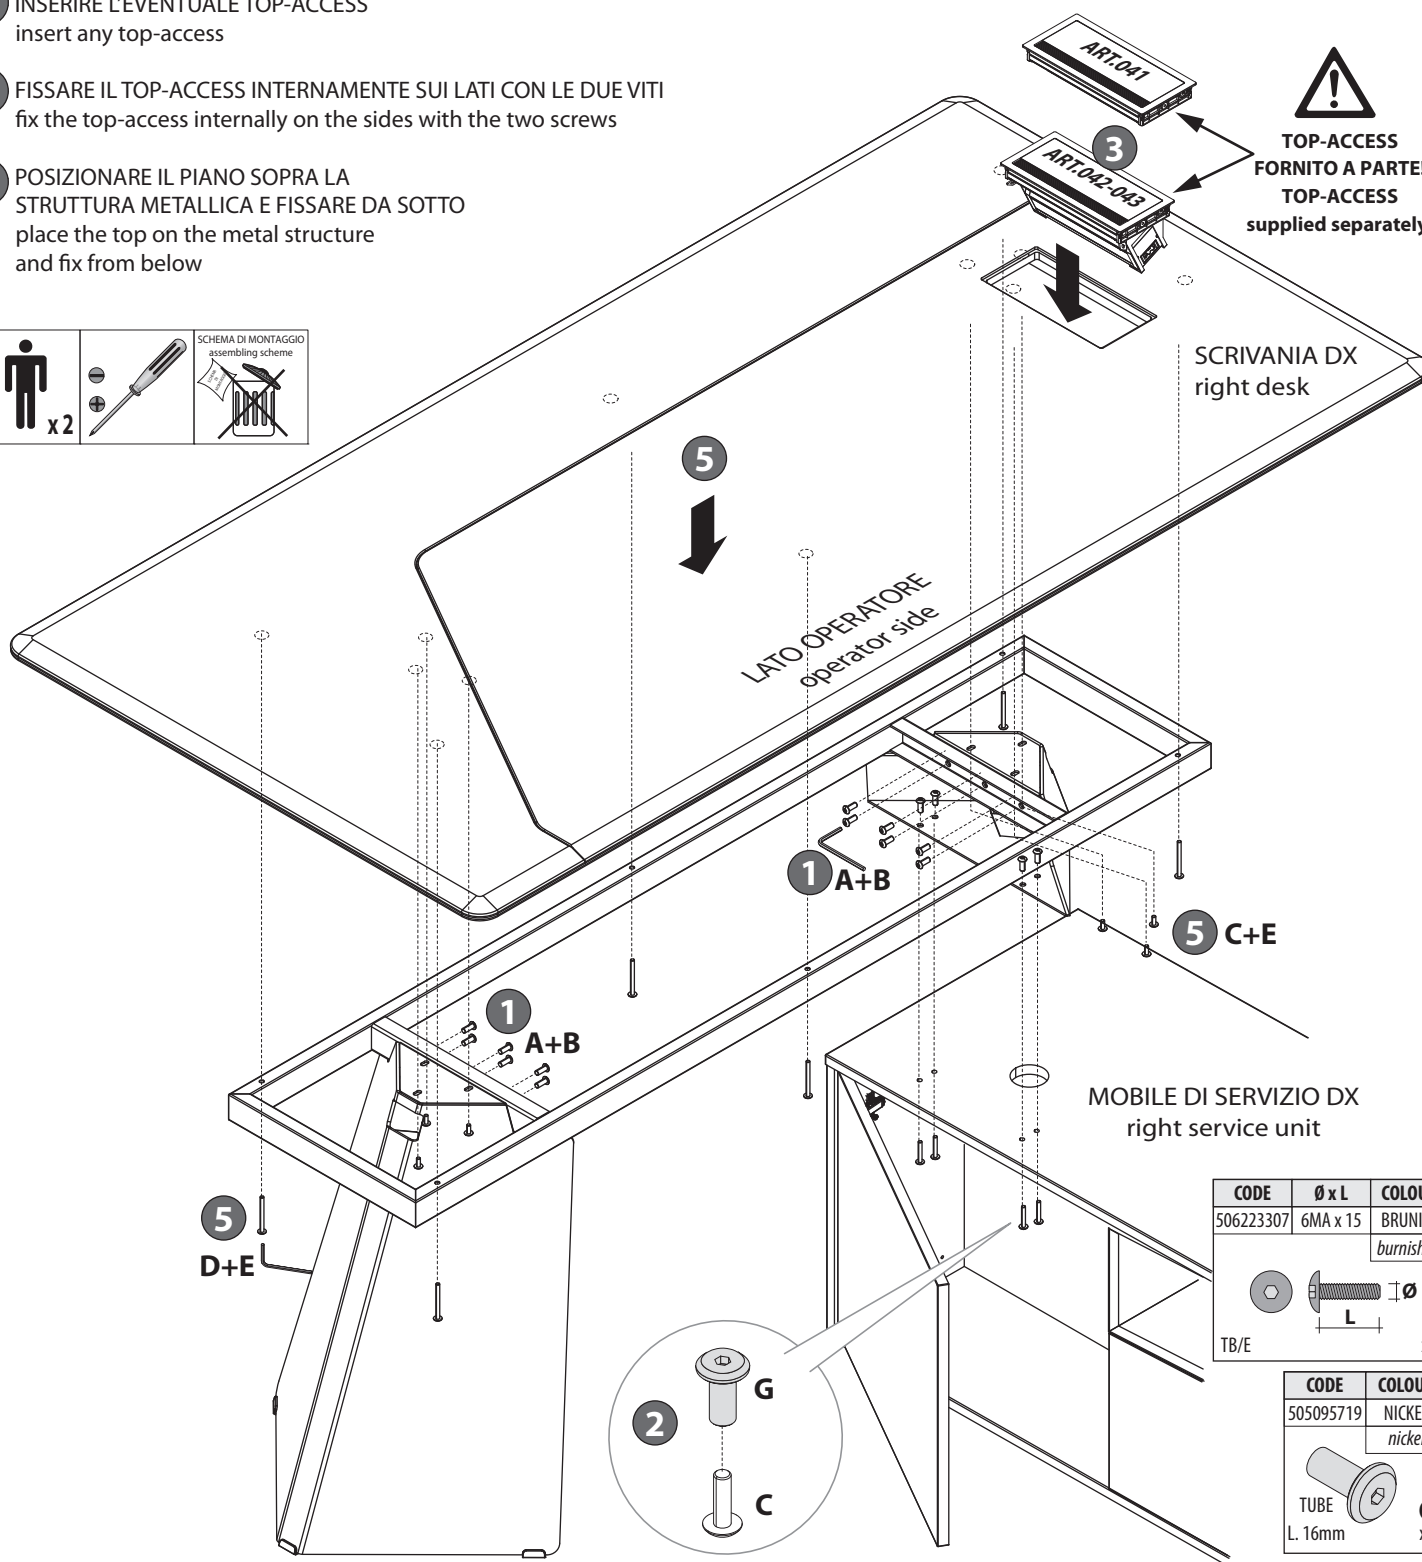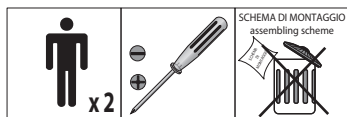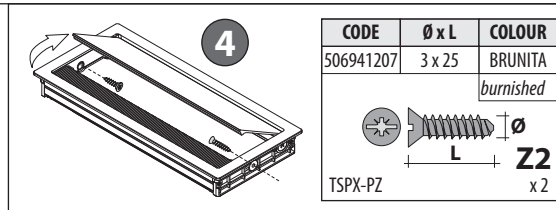

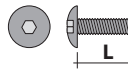CODE	Ø x L	COLOUR
506223307	6MA x 15	BRUNITA burnished
 C x 4		
TB/E		

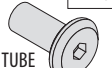CODE	COLOUR
505095719	NICKEL nickel
 G x 4	
TUBE L. 16mm	

FASI / phase
 6

6
 FISSARE LA VASCHETTA PORTACAVI SOTTO AL PIANO DOPO AVER EFFETTUATO IL CABLAGGIO
 fix the cable tray with screws under the top after the wiring is completed



CODE	Ø x L	COLOUR	CODE	COLOUR	CODE	Ø x L	COLOUR
506223307	6MA x 15	BRUNITA burnished	505182201	FERRO iron	506740308	4 x 16	BRUNITA burnished
TB/E	C	x 4	E	x 1	TCX-PZ	F	x 2

